

 
# Owner's Manual

# DA30

**PERSONAL  
MONITOR AMPLIFIER**

鼓音箱使用说明书

**nux**

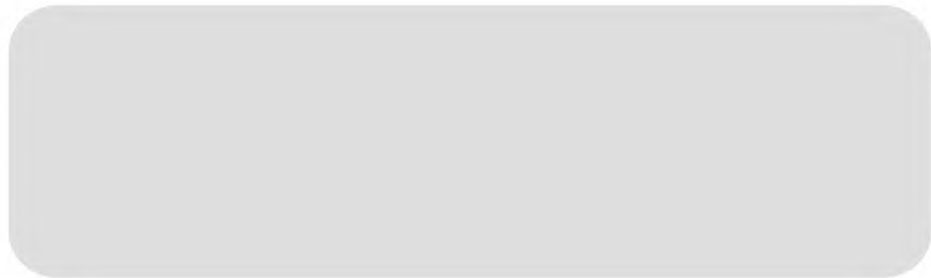

[WWW.NUXEFX.COM](http://WWW.NUXEFX.COM)



## 警告！重要的安全事项 连线之前请通读下述事项

 
1. 请使用随机附带的电源线，如要更换电源线请在专业人员指导下使用经过确认电源连接线。
2. 不要将电源线插座中间的插脚去掉！
3. 不要试图短接电源座内部的保险或是使用非正确值的保险管。
4. 不要自行维修机器！打开机箱可能将您的身体暴露于危险电压或其他危险情况之下。如需维修或维护请有资质的维修人员进行服务。
5. 如果您是具有维修资质的服务人员请注意：  
设备在任何被损坏的情况都需要进行维修服务，这其中包括诸如：电源线缆破损断裂，插座头损坏，液体或固体流入或落入机器设备内部，设备被放置在潮湿或雨水环境当中等造成机器不能正常工作的情况。
6. 不要将音箱置于潮湿的环境储存或使用！
7. 设备不应受水滴水溅，设备上不应放置诸如花瓶类的装满液体的物品。
8. 当设备长时间不用的情况下请将电源线从电源插座上拔下。
9. 当需要插入电源线到插座时，确保远离人们行走的通道。使用完毕及时收纳并妥善保管好电源线。
10. 确保音箱所使用的环境处供电插座已经进行了妥善的接地处理。

※ 请遵守上述所有警告和注意事项 ※ 请保留此手册以便需要时参考

## 前言


感谢您选择购买我公司设计生产的DA30鼓音箱。在您首次使用本产品前，请仔细阅读本说明书。

## 前面板功能控制说明

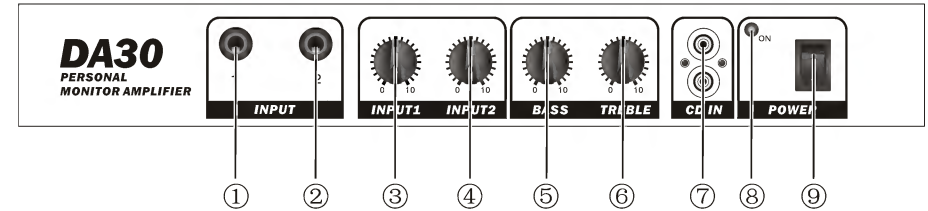

1. INPUT1线路输入  
此插孔可连接各种乐器音源信号，如键盘，电子鼓，原声吉它等。
2. INPUT2线路输入  
此插孔可连接各种乐器音源信号，如键盘，电子鼓，原声吉它等。
3. INPUT1 GAIN  
该旋钮用于控制INPUT1输入的增益。
4. INPUT2 GAIN  
该旋钮用于控制INPUT2输入的增益。
5. BASS  
该旋钮用于提升或衰减INPUT1/2输入的音源的低频信号。
6. TREBLE  
该旋钮用于提升或衰减INPUT1/2输入的音源的中高频信号。
7. CD INPUT  
此为RCA座输入，可连接CD，MP3PLAYER等音源。
8. Power电源指示灯  
接通正确电源开机工作指示灯。
9. Power Switch 电源开关  
确认接通正确电源，按下开关，机器可正常工作，同时Power LED亮红色。

## 背面板功能控制说明

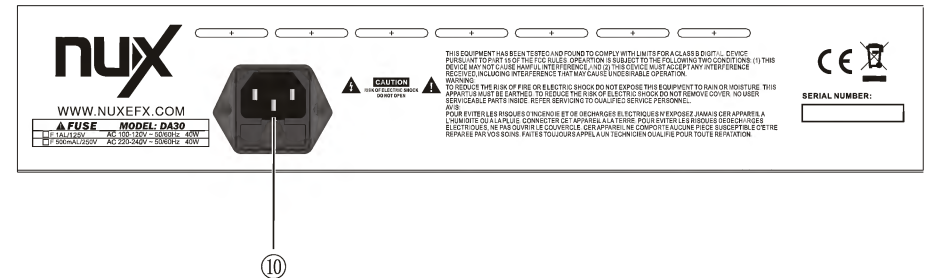 


## 10. Power inlet socket 电源插孔.

这是一个可切换电压的IEC电源插孔，用机器配置的电源线连接电源.当你需要用不同的电源供电时，请注意切换插座的保险丝方向.

## 保险丝选择

 如右图中，110-120▼对应下方的▲标记时，机器所对应的使用电压为AC110V-120V；如果使用AC220V-240V供电，则需要将保险丝座调换位置，并更换标准的保险丝即可.

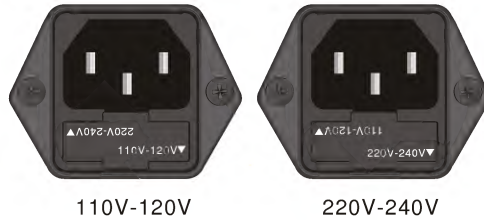

## 功能参数

额定功率：30W 有效值

功耗：40W 50/60hz 230 VAC

输入阻抗

Input1：68K

Input2：68K

输入灵敏度

Input1：-36db

Input2：-36db

EQ均衡系统

Bass：+/-15db@60hz

Treble：+/-15db@10Khz

CD输入：2\*RCA

喇叭：同轴喇叭(10 inch Woof + 1inch Tweeter)

尺寸：430mm\*390mm\*340mm(H\*W\*D)

净重：12KG

毛重：14KG

 
## WARNING!-IMPORTANT SAFETY INSTRUCTIONS BEFORE CONNECTING, READ INSTRUCTIONS

1. Use only the supplied power supply or power cord. If you are not sure of the type of power available, consult your dealer or local power company.
2. Never break off the ground pin on the power supply cord.
3. Never attempt to by-pass the fuses or fit ones of the incorrect value.
4. Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage points or other risks. Refer all servicing to qualified service personnel.
5. Refer all servicing to qualified service personnel.  
Servicing is required when the apparatus has been damaged in any way, such as when the power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped.
6. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
7. Do not allow liquids of any kinds water, soft, drinks, etc. to penetrate the unit.  
Never place objects filled with liquids, such as vases or glasses on the DA30 this can cause electric shock.  
Do not place naked flame sources, such as lighted candles, on the DA30 as this can cause fire.
8. The power supply cord should be unplugged when the unit is to be unused for long periods of time.
9. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles and at the point where they exit from the apparatus.

*Follow all instructions and heed all warnings  
KEEP THESE INSTRUCTIONS!*


Thank you for selecting the DA30 personal monitor amplifier! Please take the time to read this manual carefully to get the most out of the unit. We recommend that you keep the manual at hand for future reference.

## FRONT PANEL

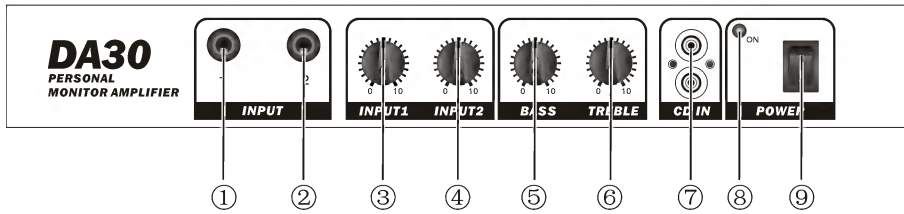

1. INPUT 1  
Connect your device such as electric drum, keyboard etc. to this input.
2. INPUT 2  
Connect your another device such as electric drum, keyboard etc. to this input.
3. INPUT 1 LEVEL  
This knob adjusts the volume of channel one.
4. INPUT 2 LEVEL  
This knob adjusts the volume of channel two.
5. BASS  
Adjust the amount of low frequency level.
6. TREBLE  
Adjust the amount of high frequency level.
7. CD INPUT  
Connect the output of an MP3 or CD player to this RCA jack.
8. POWER INDICATOR  
Indicator lights when power on.
9. POWER SWITCH  
Switch ON/OFF the machine.

## REAR PANEL

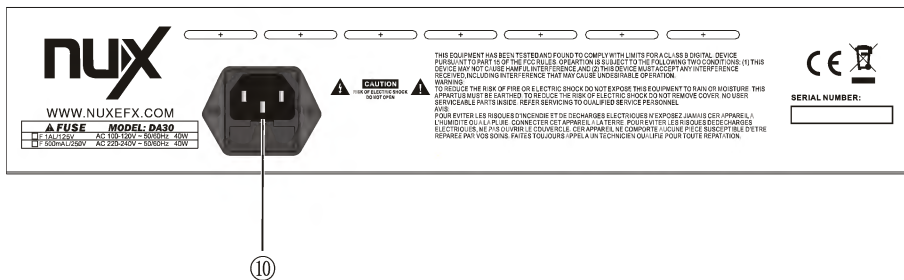 

10. AC INLET SOCKET  
Connect the included AC power cable to this inlet.

## VOLTAGE SELECTION

To change selected voltage: Open cover using small blade screwdriver or similar tool; orient cover so that desired voltage is readable at bottom; replace cover, and verify that indicator pin shows the desired voltage. USE PROPER FUSE for voltage selected!



100V-120V use 1 amp slow blow



220V-240V use 0.5 amp slow blow

## SPECIFICATION

Power Output: 30W RMS

Power Consumption: 40W

Impedence

INPUT 1: 68k ohm

INPUT 2: 68k ohm

EQ

Bass: +/- 15dB@60Hz

Treble: +/- 15dB@10kHz

CD Input: 2\*RCA -10dBv

Speaker: Coaxial (10 inch woofer + 1 inch tweeter)

Dimensions: 430mm\*390mm\*340mm (H\*W\*D)

Net Weight: 12KG

Gross Weight: 14KG