

APPENDIX A: MIDI PROGRAM CHANGES

Cerberus's Presets can be selected via MIDI program changes. Some devices number programs starting at zeros. Some start at one. We start at zero (Preset 1A) and then work our way along through the stored channels as shown in this table:

Preset No.	MIDI Program Changes	Preset No.	MIDI Program Changes	Preset No.	MIDI Program Changes	Preset No.	MIDI Program Changes
1A	0	9A	32	17A	64	25A	96
1B	1	9B	33	17B	65	25B	97
1C	2	9C	34	17C	66	25C	98
1D	3	9D	35	17D	67	25D	99
2A	4	10A	36	18A	68	26A	100
2B	5	10B	37	18B	69	26B	101
2C	6	10C	38	18C	70	26C	102
2D	7	10D	39	18D	71	26D	103
3A	8	11A	40	19A	72	27A	104
3B	9	11B	41	19B	73	27B	105
3C	10	11C	42	19C	74	27C	106
3D	11	11D	43	19D	75	27D	107
4A	12	12A	44	20A	76	28A	108
4B	13	12B	45	20B	77	28B	109
4C	14	12C	46	20C	78	28C	110
4D	15	12D	47	20D	79	28D	111
5A	16	13A	48	21A	80	29A	112
5B	17	13B	49	21B	81	29B	113
5C	18	13C	50	21C	82	29C	114
5D	19	13D	51	21D	83	29D	115
6A	20	14A	52	22A	84	30A	116
6B	21	14B	53	22B	85	30B	117
6C	22	14C	54	22C	86	30C	118
6D	23	14D	55	22D	87	30D	119
7A	24	15A	56	23A	88	31A	120
7B	25	15B	57	23B	89	31B	121
7C	26	15C	58	23C	90	31C	122
7D	27	15D	59	23D	91	31D	123
8A	28	16A	60	24A	92	32A	124
8B	29	16B	61	24B	93	32B	125
8C	30	16C	62	24C	94	32C	126
8D	31	16D	63	24D	95	32D	127